

# Quick Guide



## Tempod® 30 / 50X / 100X / 200X

Temperature Data Logger

# TEMPSEN


T: +86 21 6768 5210  
F: +86 21 6768 5232  
E: info@tempesen.com  
W: www.tempesen.com

Building 17  
66 Guangfulin(E) Rd.  
Shanghai 201613  
China

## 1> Configuration

### ▼ Configure Device Online

Connect Tempod® data logger to PC via USB connection, open online configuration portal <https://ou-tempod.tempesen.com> in internet browser, then select the device you are going to configure, input configuration parameters, download configuration profile (.cfg) and save it to the logger created Removable Storage Device "TempSenDisk".

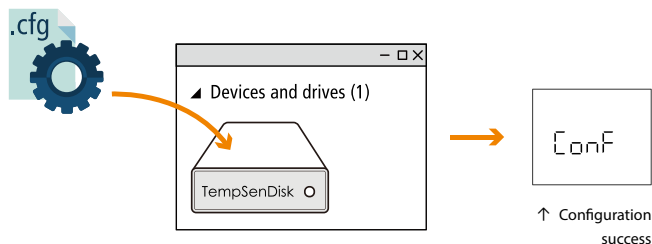

Configuration profile created contains Local Time Zone information, so please download new configuration profile when you are in different time zone to avoid time error.

### ▼ Configure Device via TempSen Express



Connect logger to computer, open TempSen Express software, go to Devices page, select connected devices and configure them using configuration profile you created.

Please **DO NOT** remove logger from PC before you are prompted of configuration success.



Please download TempSen Express software from [www.tempesen.com/downloads](http://www.tempesen.com/downloads)

### ▼ LCD After Configuration

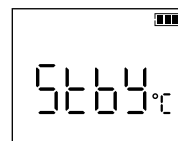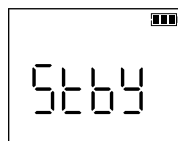

#### ↑ Standby

Ready for Manual Activation after configuration (Press Start button to activate device). Temperature unit appears in right indicating device was set to condition start (After device manually activated, recording begins after temperature meets preset temperature conditions).

 



#### ← Auto

Wait for recording begins at preset time automatically after configuration.

## 2> Start Recording

Press and hold  button for 3 seconds to activate device and start recording.

Meanwhile  (go) flashing on LCD reminds you to keep current button action.

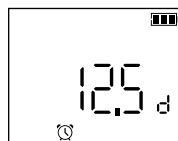

#### ← Start Delay (12.5 days)


LCD changes to time countdown if device was set to a start delay after successful activation.



**REC** appears on downleft corner of LCD indicating recording begins.

# Quick Guide

## 3> Stop Recording

Press and hold  button for 3 seconds to manually stop recording, meanwhile STOP (stop) flashing on LCD reminds you to keep current button action until STOP becomes static, recording stopped successfully.

## 4> Download Data

### ▼ Download PDF Report

Connect Tempod® data logger to USB port, logger begins to generate PDF report automatically, and it would take couple of seconds to complete. The PDF report will be available in logger created removable storage device "TempSenDisk". Please copy the PDF report and save it to your computer.



↑ Connecting to USB



↑ Generating PDF




- Please **DO NOT** perform any "Save" or "Save as" actions within PDF reader software. Otherwise, content of PDF file will be reorganized by PDF reader and raw data embedded in PDF file becomes unrecognizable.
- Please **DO NOT** remove Tempod from USB port while it's still in process of generating PDF report.

### ▼ Download Device via TempSen Express


You could download Tempod using TempSen Express software, open TempSen Express and connect data logger(s) to computer, select the data logger(s) found by TempSen Express to start downloading data.

## 5> Other Actions

### ▼ Time Mark

Press  button for 3 seconds to add a time stamped mark. Up to 9 marks available.

### ▼ Repeat Start

If device was set to **Repeat Start**, then user could press  to start a new recording again directly after recording stops, no need to program device again.

## 6> AccessKey

You could enable and apply **AccessKey** during configuration, then user will be required to provide correct AccessKey when programming device.

 shows on LCD once AccessKey was enabled.



Please contact us by sending email to [support@tempsen.com](mailto:support@tempsen.com) if Accesskey was lost.





## 7> Battery

### ▼ Battery Life

| Environment | Battery Life |
|-------------|--------------|
| Over 0°C    | 18 months    |
| Under -10°C | 10 months    |


Battery life varies from different temperature conditions, usage frequencies, and batteries. TempSen suggest use **Panasonic® CR2450** lithium battery.


### ▼ Battery Indicator

|   |   |
|---|---|
|  | Full                                      |
|  | Good                                      |
|  | Medium                                    |
|  | LOW<br>Please replace battery <b>ASAP</b> |

Battery indicator may not accurately reflect actual remaining battery in different low temperature conditions.

### ▼ Replace Battery

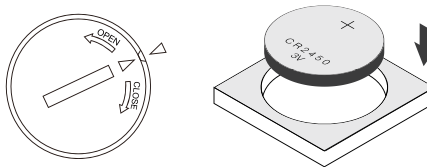

- Please insert a coin in the groove on battery compartment cover to spin it in the direction of **OPEN** to open battery cover, and take battery out, then please press  button several times until LCD changes to **blank**, otherwise volume of new battery would not be correctly recognized within one hour after battery replacement.
- Place a new Panasonic CR2450 battery into battery compartment with positive side upward.
- Put cover back to compartment in the position where triangle on cover points to the triangle on logger, then spin cover in the direction of **CLOSE** to close battery cover.



Please **DO NOT** remove battery during recording or after configuration, otherwise error will occur.


### Qualified for Air Transportation Monitoring



Battery supplied with Tempod passed the Part III, SubSection 38.3 of the UN Manual of Tests and Criteria. Tempod® data logger is also certified to meet requirements in General Requirements and Section II of Packaging Instruction 970, IATA Dangerous Goods Regulations 58th Edition. Tempod® complies with RTCA-DO160G Environmental Conditions and Test Procedures for Airborne Equipment, it's allowed to used in air freight in active status.


8> LCD

▼ Full Screen

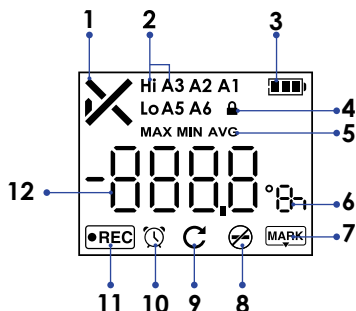


|    |   |
|----|---|
| 1  | Overall Alarm Status<br>X Alarm, ✓ OK                       |
| 2  | Alarm Zones<br>Hi (High), Lo (Low)<br>A1, A2, A3, A5, A6    |
| 3  | Remaining battery level<br>Full Good Medium Low             |
| 4  | Password (AccessKey) Protected                              |
| 5  | Statistics  |
| 6  | Units<br>°C Celsius, °F Fahrenheit, d day, h hour, m minute |
| 7  | Mark  |
| 8  | Stop Button Disabled  |
| 9  | Repeat Start Enabled  |
| 10 | Clock   |
| 11 | Running Status: Recording                                   |
| 12 | Reading   |

▼ Home Screens

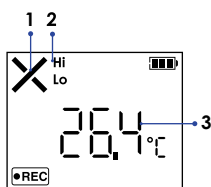


|   |                          |
|---|--------------------------|
| 1 | Status: Alarm            |
| 2 | Alarmed Zones: High, Low |
| 3 | Current Reading: 26.4°C  |

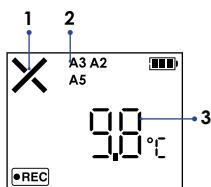

|   |                           |
|---|---------------------------|
| 1 | Status: Alarm             |
| 2 | Alarmed Zones: A2, A3, A5 |
| 3 | Current Reading: 9.8°C    |

▼ Logging Statistics

Click button to step through following recording statistics screens.

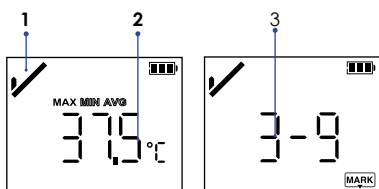

|   |                           |
|---|---------------------------|
| 1 | Status: OK                |
| 2 | Statistics<br>Max: 37.5°C |
| 3 | Marked events: 3          |

▼ Errors



↶ Error: 004  
Error message appears on device LCD when error condition occurs.

|      |   |
|------|---|
| E004 | Error 004<br>Device reset                                   |
| E006 | Error 006<br>Start time error                               |
| E009 | Error 009<br>Start failure due to low battery               |
| E101 | Error 101<br>CFG file checksum error                        |
| E102 | Error 102<br>CFG file error, incorrect device model         |
| E104 | Error 104<br>CFG file error, incompatible device version    |
| E105 | Error 105<br>CFG file error, missing or incorrect AccessKey |
| E106 | Error 106<br>CFG file error, incorrect auto start time      |

Please re-configure device to eliminate error.

9> Important Usage Information

- Please open the cap of battery compartment and remove battery isolation strip before use.
- You could choose to **Show Tabular Data** in PDF report during configuring device, but please note that it will take at around one minute to create PDF report with 28800 data points in tabular data pages after device connected to computer. Computer is not able to discover device connected until PDF report generation completes.
- Please **DO NOT** use the device if LCD no response or shows error (i.e E004) after activated.
- If error occurs after configuration, please try to re-configure data logger to eliminate error.
- Please **DO NOT** place device but only external probe (if any) in environment lower than -30°C to avoid possible damage to device.

## 10> Warranty

TempSen warrants this TempSen-branded hardware product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from shipment date ("Warranty Period"). If a hardware defect arises and a valid claim within the Warranty Period, as its option and to the extent permitted by law, TempSen will either (1) repair the hardware defect at no charge, using new parts or parts equivalent to new in performance and reliability, (2) exchange the new product with a product is new or equivalent to new in performance and reliability and is at least functionally equivalent to the original product, or (3) refund the purchase price of this product. TempSen may request that you replace defective parts with new or refurbished user-installable parts that TempSen provides in fulfillment of its warranty obligation. A replacement product or parts, including a user-installable part that has been installed in accordance with instructions provided by TempSen, assumes the remaining warranty of the original product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes TempSen's property. Parts provided by TempSen in fulfillment it's warranty obligation must be used in products for which warranty service is claimed. When a refund is given, the product for which the refund is provided must be returned to TempSen and becomes TempSen's property.

### EXCLUSIONS AND LIMITATIONS

This Limited Warranty applies only to the hardware product manufactured by or for TempSen that can be identified by the "TempSen" trademark, trade name, or logo affixed to it. The Limited Warranty does not apply to any non-TempSen hardware product or any software, even if packaged or sold with the TempSen hardware. Manufacturers, suppliers, publishers, other than TempSen, may provide their own warranties to the end user purchaser, but TempSen, in so far as permitted by law, provides their products "as is". Software distributed by TempSen with or without the TempSen brand name (including, but not limited to system software) is not covered under this Limited Warranty. Refer to the licensing agreement accompanying the software for details of your rights with respect to its use.

TempSen does not warrant that the operation of product will be uninterrupted or error-free. TempSen is not responsible for the damage arising from failure to follow instructions relating to the product's use.

This warranty does not apply: (a) to consumable parts, such as batteries, unless damage has occurred due to a defect in materials or workmanship; (b) to cosmetic damage, including but not limited to scratches, dents, and broken plastic on ports; (c) to damage caused with non-TempSen products; (d) to damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes; (e) to damage caused by operating the product outside the permitted or intended uses described by TempSen; (f) to damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of TempSen or TempSen Authorized Service Provider; (g) to a product or part that has been modified to alter functionality or capability without the written permission of TempSen; or (h) if any TempSen serial number has been removed or defaced.

**IMPORTANT: DO NOT OPEN THE HARDWARE PRODUCT. OPENING THE HARDWARE PRODUCT MAY CAUSE DAMAGE THAT IS NOT COVERED BY THIS WARRANTY. ONLY TEMPSEN OR AN AUTHORIZED SERVICE PROVIDER SHOULD PERFORM SERVICE ON THIS HARDWARE PRODUCT.**

